

YOUR DOOR ALARM

BEFORE YOU BEGIN

- Work on a clean, flat surface, like a tabletop.
- Wash and dry your hands before and after you assemble your alarm.
- Remove all the parts from the box.
- To remove the case back from the alarm, stick the tip of the little screwdriver into the slot in the case back and gently pry the back off.
- Compare all the parts to the photograph. Make sure you have all the pieces before you begin (**Fig. A**).
- Do not place the **KEEP OUT!** stickers on the alarm until it is mounted on your door. (You'll find out why later!)

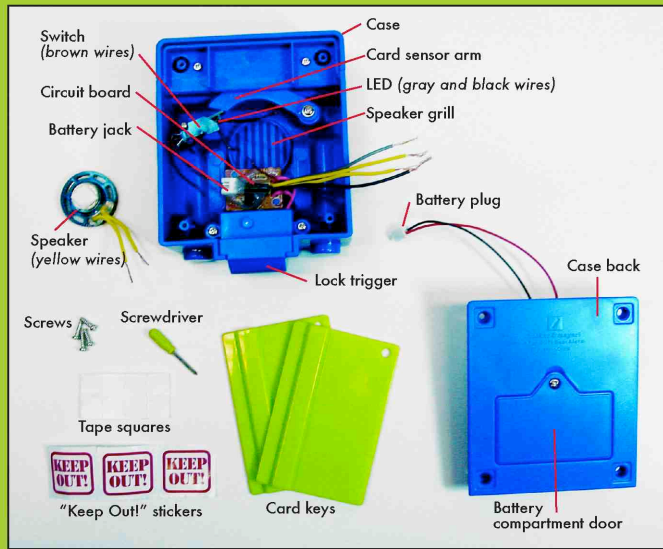


Fig. A

ASSEMBLY INSTRUCTIONS

Understanding the Circuit Board and Wires

Part of your alarm is already put together—the tan rectangle with wires hanging out. This piece is called the circuit board, and it's the “brains” of your alarm. You'll connect other electronic parts, called components, to it.

Look at your circuit board and gently untangle the wires. If the copper wires on the ends are all frizzed out, pinch them between your thumb and index finger to straighten them.

How to Connect Wires

Do not twist together any wires until you are told to do so in the instructions.

Use this procedure to connect the components to the circuit board:

1. Find a colored wire on the circuit board.

2. Find the same-colored wire on the component (**Fig. B**).

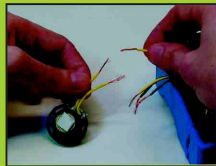


Fig. B

3. Twist together the metal ends of the two wires. Make sure you twist both wires around each other (**Fig. C**).



Fig. C

4. Test your connections by gently pulling the wires to make sure they will not come apart.
5. Bend the twisted wires, as shown in Figure D.

6. Take a piece of tape (about 1”) and wrap it around all the exposed metal on the connection (**Fig. D**).

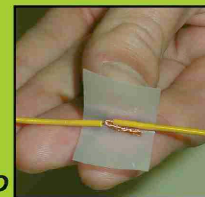


Fig. D

ALERT!

Always twist together two wires of the same color. Make sure one wire is from the circuit board, and the other wire is connected to an electronic component.


Assembling Your Alarm

1. Find one of the **yellow** wires on the circuit board and connect it to one of the **yellow** wires coming out of the speaker. Twist and tape the wires together using the method described.

2. Connect the other **yellow** wire on the circuit board to the remaining **yellow** wire on the speaker. Cover the connection with tape.

3. Gently press the speaker into the grill (**Fig. E**).

4. Find the **black** wire on the circuit board and the **black** wire on the LED. Twist and tape these wires together.

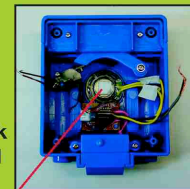

Speaker pressed in grill.

Fig. E

5. After you have twisted and taped the black wires, twist together the **gray** wire on the circuit board and the **gray** wire on the LED. Cover the connection with tape.

6. Connect one of the **brown** wires on the circuit board to one of the **brown** wires on the switch. Cover the connection with tape.

- Finally, twist and tape together the last **brown** wire from the circuit board and the remaining **brown** wire on the switch.
- Snap the white battery plug into the white battery jack. The little ridge on the plug should be facing up.

Testing and Closing Up

- Unscrew the battery compartment door on the case back and insert two fresh AA batteries into the battery case. Make sure the batteries are inserted the correct way, according to the diagram inside the battery case.

- Screw the battery compartment door onto the battery case.

- To test the alarm, use your finger to press the blue card sensor arm against the black switch (**Fig. F**). You should hear a “lockdown” sound, and the red LED should blink.

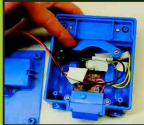


Fig. F


- If the alarm does not work, make sure all the metal parts of the wires are twisted tightly together, making a good metal-to-metal connection. Also, make sure the batteries are fresh and that they are installed properly.

- Place the back onto the case. Make sure no wires are being pinched between the case and the case back.



Fig. G

- Screw the case closed with the screws provided (**Fig. G**).

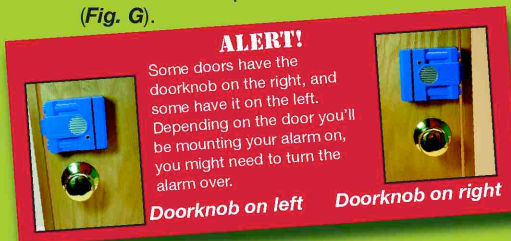

Positioning the Alarm

NOTE: There are many different kinds of doors, so you will need to figure out the best place to stick the tape squares so that they hold the alarm to YOUR door. Here's how:

- Turn your alarm so the **BACK** is facing you.

- Hold the alarm against your door, just above the doorknob. Position the alarm so the trigger touches the doorjamb (**Fig. H**).

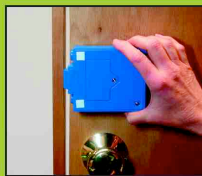


Fig. H

- Peel four tape squares off the backing. Stick a square on each of the two screw holes next to the trigger.

- Place the remaining two squares on the alarm in places where you can see that they will be touching the door when you turn the alarm over. Remove the backing from the top of the tape squares (**Fig. I**).



Fig. I

BATTERY CAUTIONS!

- Battery replacement must always be done by an adult.
- Never let a child use this product unless the battery door is secure.
- Keep all batteries away from small children, and immediately dispose of any batteries safely.
- Batteries are small objects and could be ingested.
- Do not use rechargeable batteries.
- Different types of batteries or new and used batteries are not to be mixed.
- Only use batteries of the same or equivalent types as recommended.
- Batteries are to be inserted with the correct polarity.
- Remove exhausted batteries from toy.
- Do not short-circuit supply terminals.

Mounting Your Alarm

- Take a piece of paper and fold it twice.
- Go outside the room and close the door you are going to place the alarm on. You are going to place the alarm just above the doorknob. The trigger will face the doorjamb.
- Place the paper against the doorjamb.

- Press the alarm against the paper, depressing the trigger.

- With the trigger depressed, push the alarm against the door until it sticks to the door.

- Remove the piece of paper (**Fig. J**).

- The trigger should be pressed when the door is shut.



Fig. J

- Press the **KEEP OUT!** sticker in the spot provided.

Using Your Door Alarm

Close the door.

To activate the alarm, fit the notched side of the key card into the slot and slide the key card down and all the way through the slot (**Fig. K**). You'll hear a “lockdown” sound, and the red LED will blink. Your alarm is now activated!

If anyone opens the door while the alarm is activated, look out! Your alarm will warn potential intruders to “Keep Out!” and a 5-second siren will sound.



Fig. K

To deactivate the alarm, swipe the key card through the slot, the same way you did before.

Note: Your alarm will not reactivate itself, so you will know if someone opened the door!

Enjoy the warm, anti-sneak feeling that comes from using your very own **KEEP OUT!** Door alarm!

RETAIN INFORMATION FOR FUTURE REFERENCE.

If you have any questions or comments about this product, send e-mail to infobm@beckermayer.com, or call 425•827•7120.

For ages 7 and up.

Published by Tangerine Press, an imprint of Scholastic Inc.,
557 Broadway, New York, NY 10012.

Copyright © 2003 becker&mayer!,
Bellevue, WA. All rights reserved.

Printed, manufactured, and
assembled in China.

